


System 922 PFT for DS1 Robbed Bit and ISDN PRI Typical Installation

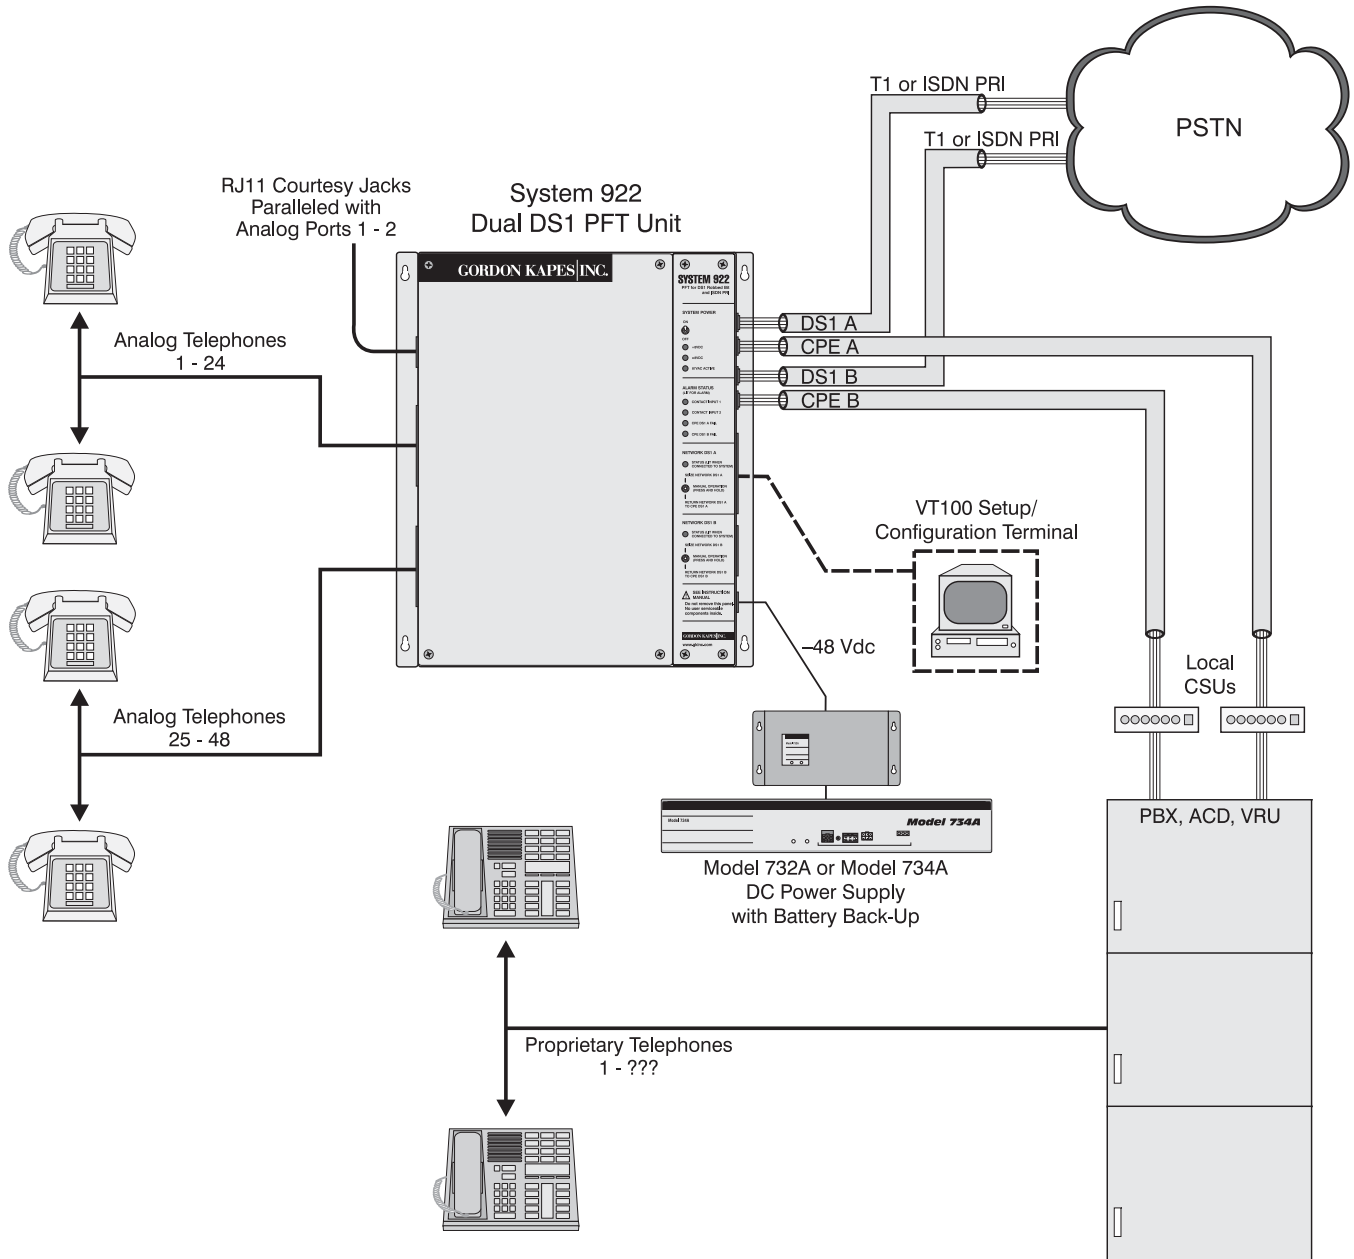

System 922 PFT for DS1 Robbed Bit and ISDN PRI Typical Installation, continued

